



EARTHING TERMINALS




An earthing terminal is provided and must be used to adequately ground the pump. It must be installed in the locations as noted, below. Do not install an earthing terminal on a pressure containing screw. Suitable earthing techniques are required for pumps mounted on road tankers. Pumps are shown without coupling guards. Coupling guards are required.

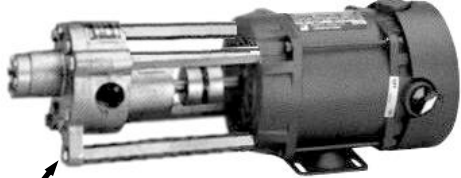


FOR D-SERIES PUMPS, INSTALL TERMINAL UNDER HEAD OF MOUNTING CAP SCREW ON PUMP FACE. RETIGHTEN TO PROPER TORQUE.

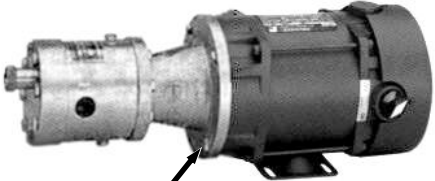

FOR GC / MC-SERIES PUMPS, INSTALL TERMINAL UNDER HEAD OF FLANGE MOUNTING CAP SCREW ON MOTOR FACE. RETIGHTEN TO PROPER TORQUE.

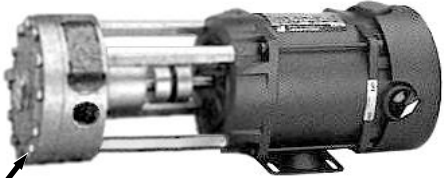

FOR E-SERIES PUMPS, INSTALL TERMINAL UNDER HEAD OF MOUNTING CAP SCREW ON PUMP FACE. RETIGHTEN TO PROPER TORQUE.

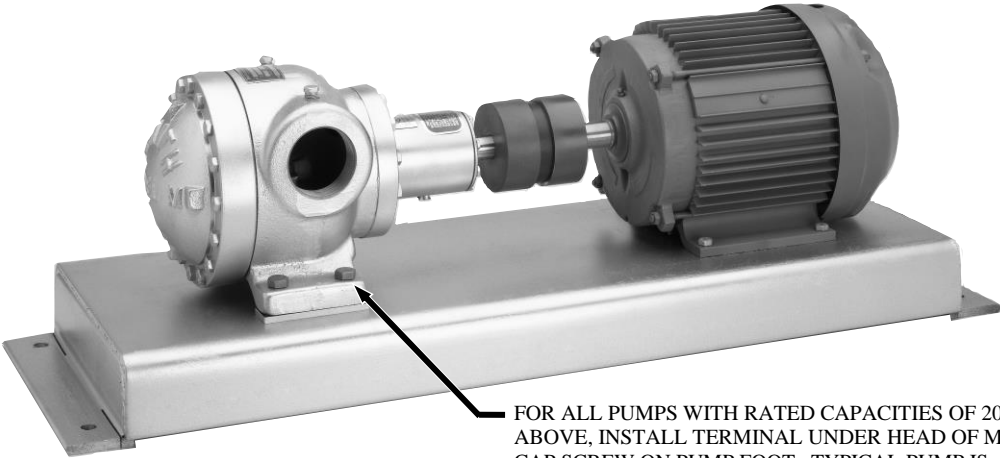

FOR ALL PUMPS WITH RATED CAPACITIES OF 20 GPM AND ABOVE, INSTALL TERMINAL UNDER HEAD OF MOUNTING CAP SCREW ON PUMP FOOT. TYPICAL PUMP IS ILLUSTRATED ABOVE. RETIGHTEN TO PROPER TORQUE.



SMITH PRECISION PRODUCTS COMPANY

P.O. Box 276, Newbury Park, CA 91319 USA
1299 Lawrence Drive, Newbury Park, CA 91320 USA
Tel.: 805/498-6616 FAX: 805/499-2867

e-mail: INFO@smithpumps.com web: www.smithpumps.com