

EFFECTIVE:
 JULY 1, 2008

PARTS LIST FOR SQ-100 SHAFT-SEAL ASSEMBLY

<u>PART #</u>	<u>NAME OF PART</u>	<u>QTY SQ-1</u>	<u>REQ'D SQ-H</u>
SQ-100	* SHAFT-SEAL ASSEMBLY	1	1
SQ-7A	MAIN SHAFT	1	1
MS-12LL	LARGE SEAL	1	1
MC-13LL	CARBON RING	1	1
MC-13LLP	SUPERSEAL SEAL RING	1	1
MS-13LLU	SMALL SEAL (U-CUP TYPE)	1	1
568-120	O-RING FOR MS-13LLU	1	1
SQ-16S	SPRING COLLAR WITH PIN SQ-42	1	1
5 KEY	SHAFT KEY FOR DRIVE GEAR	1	1
MS-25	BALL (5/16 DIAMETER)	1	1
MS-23	SHAFT-SEAL SPRING	1	1
6230-5	* O-RING 568-227	1	1
5100-98PP	RETAINER RING	2	2
305-SFZ	BALL BEARING	1	1
410120	GREASE SEAL	1	1
SQ-33	KEY	1	1

*** When ordering new or exchange shaft-seal assemblies, the liquid being pumped, model number, and serial number of the pump must be given. (See metal name plate on pump for this information)**

NOTE: While shaft-seal assembly parts may be ordered individually for pumps used with non-hazardous liquid, we strongly advise against attempting to make repairs in the field. Instead, new or exchange shaft-seal assemblies are available as noted.

We will not ship individual shaft-seal parts for pumps handling hazardous liquids such as LP-GAS or Anhydrous Ammonia within the U.S.A.