

Installation and Operation of D-Series Pump

D-Series pumps are designed to operate in one direction: with the pump shaft pointing towards the observer, the pump operates in a counterclockwise direction. (This is the opposite of our E-Series pumps.)

All D-Series pumps are equipped with a built-in external by-pass valve. Unlike the E-Series pumps, the D-Series bypass valve will not relieve internally. The D-Series bypass valve port is located in a flange, on the gear end cover. The DW-1Z bypass valve flange is 1/2-inch FNPT, as is the one on the DW-HZ. Both pumps must be piped so that a bypass valve line leads from the bypass valve flange to the vapor space connection on the supply tank. Proper pump bypass is important and should not be ignored. Our recommendations should be followed as closely as possible. ***If a D-Series pump is operated with a plug in the bypass valve flange, an external bypass valve must be used.*** The bypass valve in both D-Series pumps is set to crack at 90 PSID.

All D-Series pumps are equipped with a stainless steel strainer screen. Separate Y-type in-line

strainers are not necessary and may cause damage to the pump. Periodic inspection of the built-in strainer is required and thorough cleaning may be necessary. This is important!

Periodic inspection of all working parts should be an automatic feature of any maintenance program. If significant wear is found with any working part such as the gear set, bushings, idler gear shaft, bypass valve cartridge, or mechanical shaft seal assembly, these parts should be immediately replaced. If in doubt, contact the factory for advice.

D-Series pumps are designed to discharge rated capacities at 3600 RPM motor speed.

Inlet and outlet pipe should be 3/4-inch for the DW-1Z pump and 1-inch for the DW-HZ pump. Smaller than recommended pipe size will cause premature wear of most working parts in the pump.

If product leakage is detected, the pump should immediately be taken out of service and repaired or replaced.

DO NOT OPERATE ANY PUMP WITH A LEAKING SEAL!



SMITH PRECISION PRODUCTS COMPANY

P.O. Box 276, Newbury Park, CA 91319 USA

1299 Lawrence Drive, Newbury Park, CA 91320 USA


Tel.: 805/498-6616 FAX: 805/499-2867

e-mail: INFO@smithpumps.com web: www.smithpumps.com

Installation and Operation of D-Series Pumps


GENERAL INSTALLATION USING BUILT-IN BYPASS VALVE

	DW-1Z PUMP	DW-HZ
PUMP		
A	3/4" PIPE	1" PIPE
B	3/4" PIPE	1" PIPE

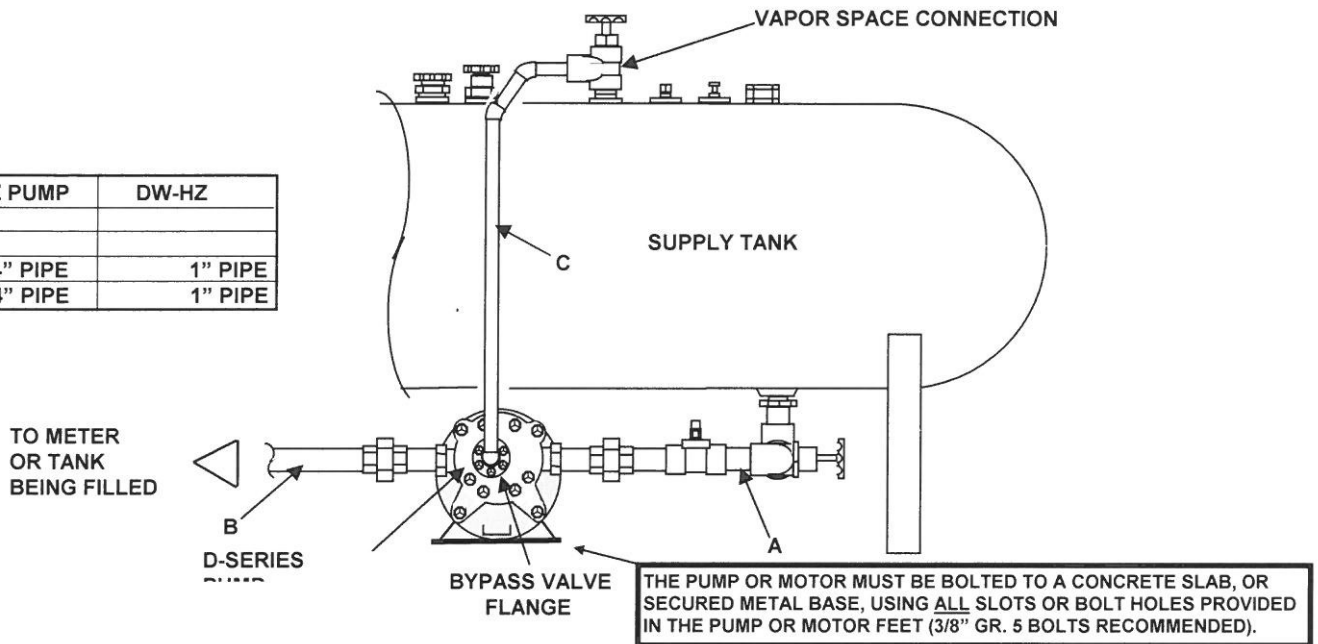

GENERAL INSTALLATION USING SEPARATE EXTERNAL BYPASS VALVE

	DW-1Z PUMP	DW-HZ PUMP
A	3/4" PIPE	1" PIPE
B	3/4" PIPE	1" PIPE
C	1/2" PLUG	1/2" PLUG
D	1/2" BYPASS VALVE	1/2" BYPASS VALVE
E	1/2" PIPE	3/4" PIPE

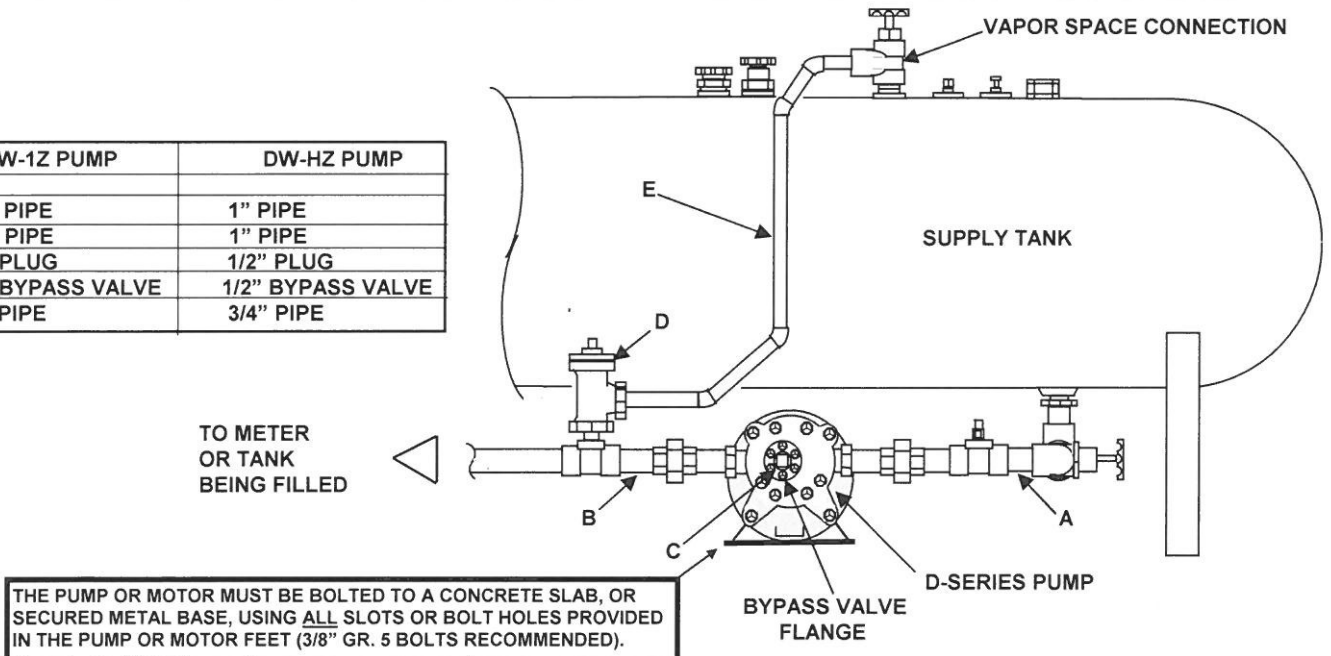

These diagrams are intended to show general piping and installation configurations only. For more specific information consult with the other equipment manufacturers, follow all applicable safety codes and regulations, and read other literature available from Smith Precision including but not limited to the following: "AL-17A", "AL-3", and "ED-1". Contact the factory for dimension drawings or assembly views (specify model). Consult "NFPA-58".



SMITH PRECISION PRODUCTS COMPANY

P.O. Box 276, Newbury Park, CA 91319 USA
 1299 Lawrence Drive, Newbury Park, CA 91320 USA
 Tel.: 805/498-6616 FAX: 805/499-2867
 e-mail: INFO@smithpumps.com web: www.smithpumps.com